

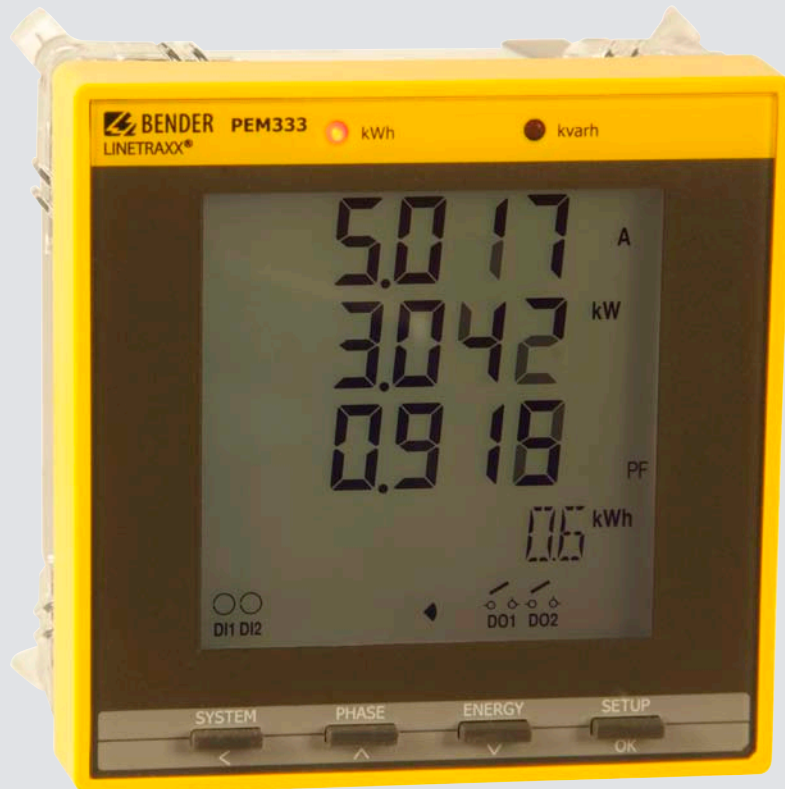


Power Quality and Energy Measurement PEM330/PEM333

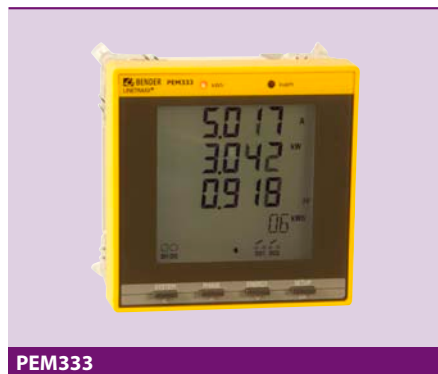

Power Quality and Energy Measurement

PEM330/PEM333



PEM333

Device features

- Accuracy class according to IEC 62053-22: 0.5 S
- Measured quantities
 - Phase voltages U_{L1}, U_{L2}, U_{L3} in V
 - Line voltages $U_{L1L2}, U_{L2L3}, U_{L3L1}$ in V
 - Phase currents I_1, I_2, I_3 in A
 - Neutral current (calculated) I_4 in A
 - Frequency f in Hz
 - Phase angle for U and I in $^\circ$
 - Power per phase conductor S in kVA, P in kW, Q in kvar
 - Total power S in kVA, P in kW, Q in kvar
 - Displacement factor $\cos(\varphi)$
 - Power factor λ
 - Active and reactive energy import in kWh, kvarh
 - Active and reactive energy export in kWh, kvarh
 - Voltage unbalance in %
 - Current unbalance in %
 - Harmonic distortion (THD) for U and I
 - k-factor for I
- Programmable setpoint monitoring (PEM333 only)
- LED pulse outputs for active and reactive energy
- Modbus RTU communication via RS-485 (PEM333 only)
- 2 digital outputs (PEM333 only)
- Requirements of energy and current for particular time frames
- Peak demands with timestamps

Product description

The universal measuring device PEM330/333 is used to record and indicate electrical quantities of a public electricity network. The scope of measurements ranges from currents and voltages through energy consumption and performance to total harmonic distortion and voltage quality assessment. The active energy measurements are in compliance with the DIN EN 62053-22 class 0.5 S accuracy standard. The current inputs are connected via external .../1 A or .../5 A measuring current transformers.

Typical application

- As a compact device for front panel mounting, the PEM330/333 is a replacement for analogue indicating instruments
- Typical application in low and medium-voltage networks (via measuring voltage transformer)
- Power quality monitoring
- Collection of relevant data for energy management systems
- Energy consumption allocation to cost accounting centers

Description of function


- Sampling rate of the measuring channels: 1,6 kHz
- Calculation of the total harmonic distortion THD_U/THD_I : up to the 15th harmonics
- Password protection
- Easy installation with mounting clips, no tools required
- Inputs and outputs (PEM333 only):
 - 2 digital outputs
 - 6 user-programmable setpoints (response values, response delay 0...9999 seconds)
 - System protocol: 32 events, setup changes, DI/setpoint status changes, DO operations
- Communication (PEM333 only):
 - Electrically isolated RS-485 interface (1,200 bit/s to 19,200 bit/s)
 - Modbus-RTU protocol

Standards

The universal measuring device for Power Quality and Energy Measurement PEM330/PEM333 was developed in accordance with the following standards: DIN EN 62053-22 (VDE 0418 Part 3-22), DIN EN 61557-12 (VDE 0413-12).


Features	PEM330	PEM333
RS-485	–	■
Digital inputs	–	2
Digital outputs	–	2
Sampling rate	1,6 kHz	1,6 kHz
THD calculation	15.	15.

Operating elements

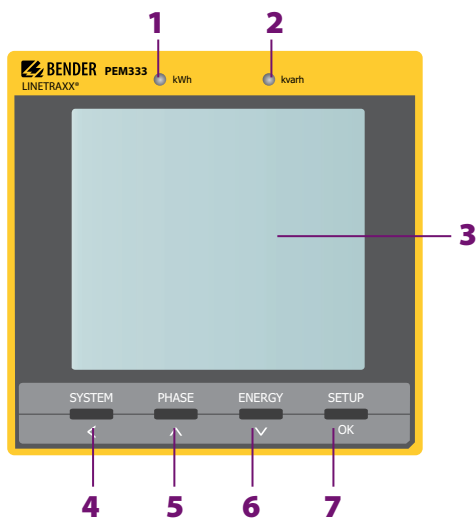


- 1 - Pulse LED: kWh
- 2 - Pulse LED: kvarh
- 3 - Display
- 4 - "SYSTEM" button: Selection (in the menu)
- 5 - "PHASE" button: Up (in the menu)
- 6 - "ENERGY" button: Down (in the menu)
- 7 - "SETUP" button: OK (in the menu)
Press the "SETUP" button > 1.5 s to enter/leave the Setup menu.

Wiring diagram

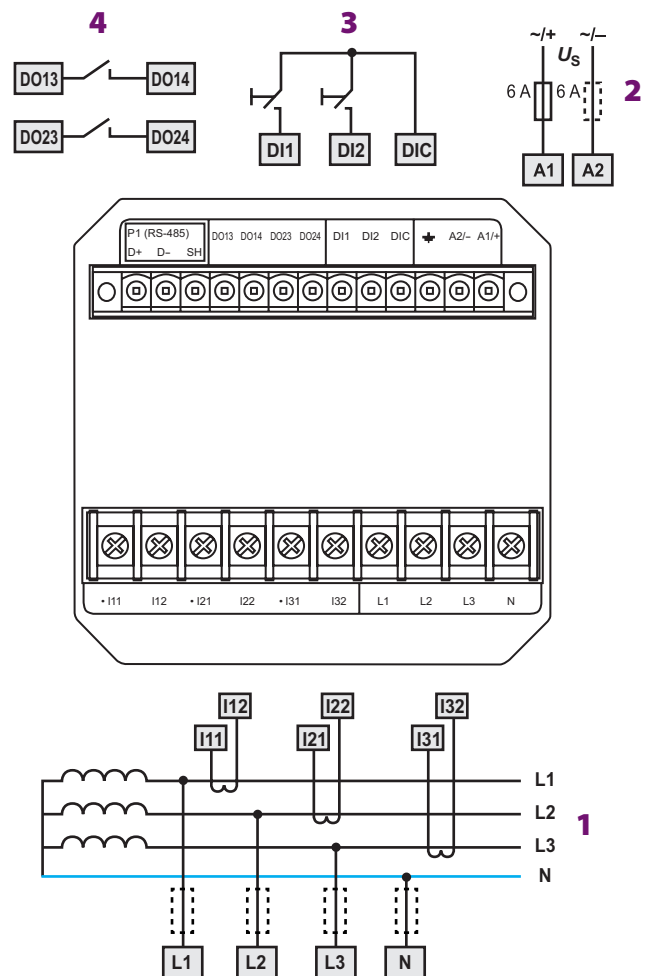

- 1 - Connection to the system to be monitored: The measuring leads are to be protected by appropriate fuses.
- 2 - Supply voltage. Line protection by a fast-acting 6-A fuse. Voltage supply from an IT system requires both lines to be protected by a fuse.
- 3 - Digital inputs
- 4 - Digital outputs (N/O contacts)

Example for system set-up

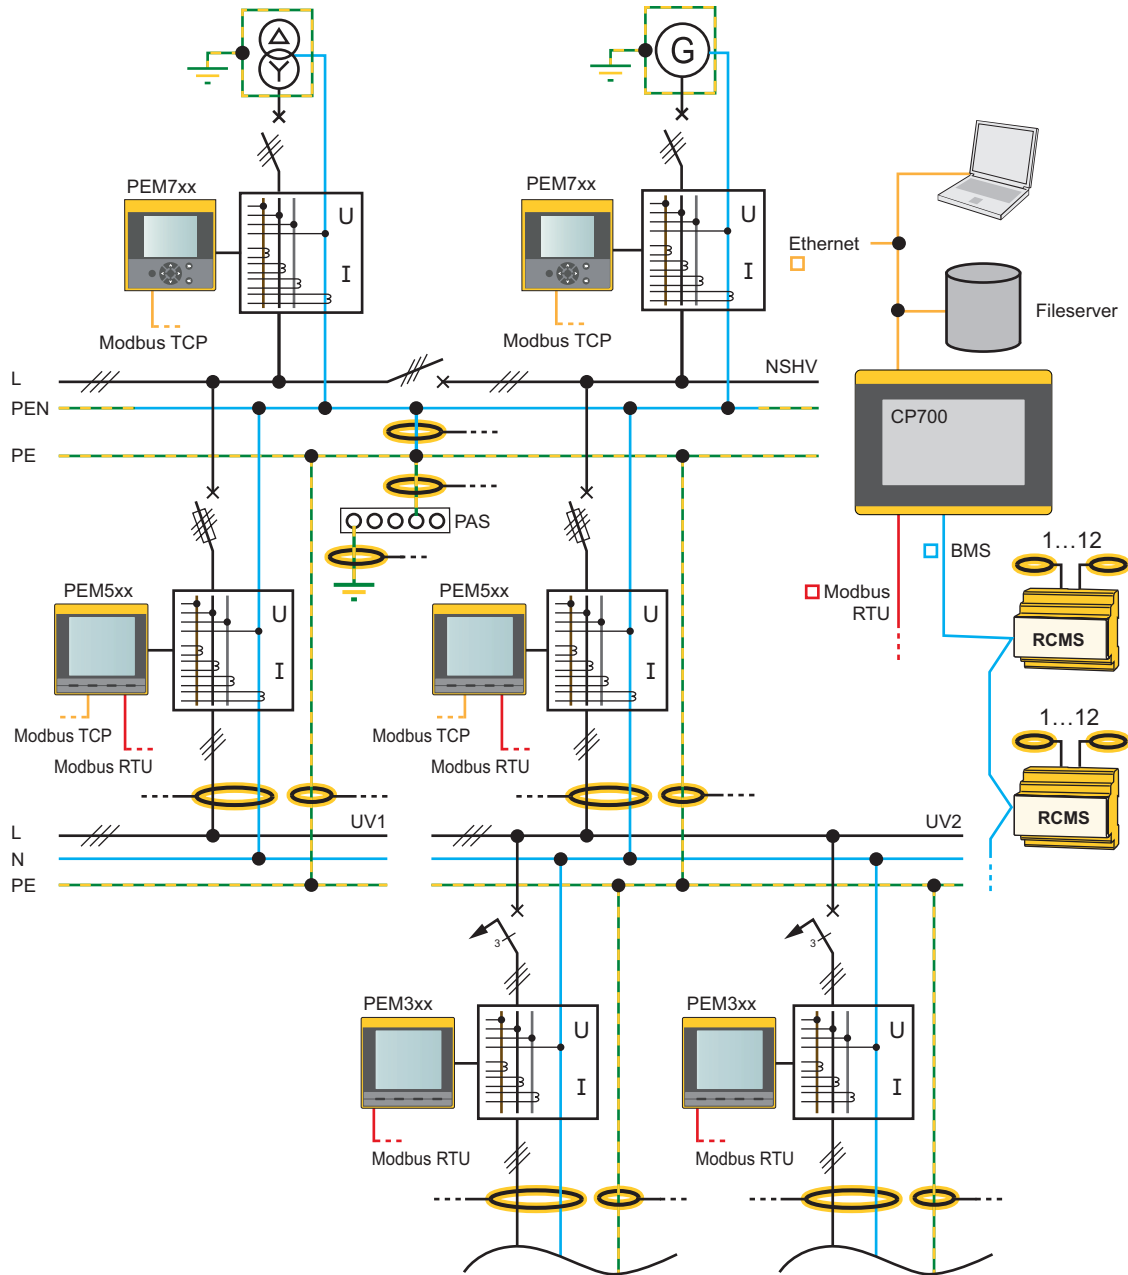

NSHV = Low-voltage main distribution board

Technical data
Insulation co-ordination
Measuring circuit

Rated insulation voltage	300 V
Overvoltage category	III
Pollution degree	2

Supply circuit

Rated insulation voltage	300 V
Overvoltage category	II
Pollution degree	2

Supply voltage

Rated supply voltage U_S	95...250 V
Frequency range of U_S	DC, 44...440 Hz
Power consumption	≤ 5 VA

Measuring circuit
Measuring voltage inputs

U_n ($U_{L1-N}, U_{L2-N}, U_{L3-N}$)	230 V
$U_{L1-L2}, U_{L2-L3}, U_{L3-L1}$	400 V
Measuring range	10... 120 % U_n
Rated frequency	45...65 Hz
Internal resistance (L-N)	> 500 k Ω

Measuring current inputs

External measuring current transformer should at least comply with accuracy class 0.5 S

Burden	n.A., internal current transformers
Measuring range	0.1... 120 % I_n
PEM330/333	
I_n	5 A
Measuring current transformer ratio	1...6000
PEM330-251/PEM333-251	
I_n	1 A
Measuring current transformer ratio	1...30000

Accuracies (of measured value / of full scale value)

Phase voltage $U_{L1-N}, U_{L2-N}, U_{L3-N}$	± 0.2 % of measured value
Current	± 0.2 % of measured value + 0.05 % of full scale value
Neutral current I_4	1 % of full scale value
Frequency	± 0.02 Hz
Phase position	$\pm 1^\circ$
Active energy measurement according to	DIN EN 62053-22 (VDE 0418 Part 3-22)
r.m.s. voltage measurement according to	DIN EN 61557-12 (VDE 0413-12), chapter 4.7.6
r.m.s. phase current measurement according to	DIN 61557-12 (VDE 0413-12), chapter 4.7.5
Frequency measurement according to	DIN EN 61557-12 (VDE 0413-12), chapter 4.7.4

Interface*

Interface/protocol	RS-485/Modbus RTU
Baud rate	1.2... 19.2 kbit/s
Cable length	0... 1200 m
Shielded Cable (shield connected to terminal SH on one side)	recommended cable J-Y(St)Y min. 2 x 0.8

Switching elements*

Outputs	2 N/O contacts
Operating principle	N/O operation
Rated operational voltage	AC 230 V DC 24 V AC 110 V DC 12 V
Rated operational current	5 A 5 A 6 A 5 A
Minimum contact rating	1 mA at AC/DC ≥ 10 V
Inputs	2 electrically separated digital inputs
I_{min}	2.4 mA
U_{DI}	DC 24 V

Environment/EMC

EMC	DIN EN 61326-1
Operating temperature	-25...+55 $^\circ$ C
Climatic class acc. to DIN EN 60721	
Stationary use	3K5
Classification of mechanical conditions acc. to DIN EN 60721	
Stationary use	3M4

Connection

Connection	screw-type terminals
------------	----------------------


Other

Degree of protection, installation	IP20
Degree of protection, front	IP54
Operating manual	TGH1476
Weight	≤ 550 g

* PEM333 only

Dimension diagram

Dimensions in mm

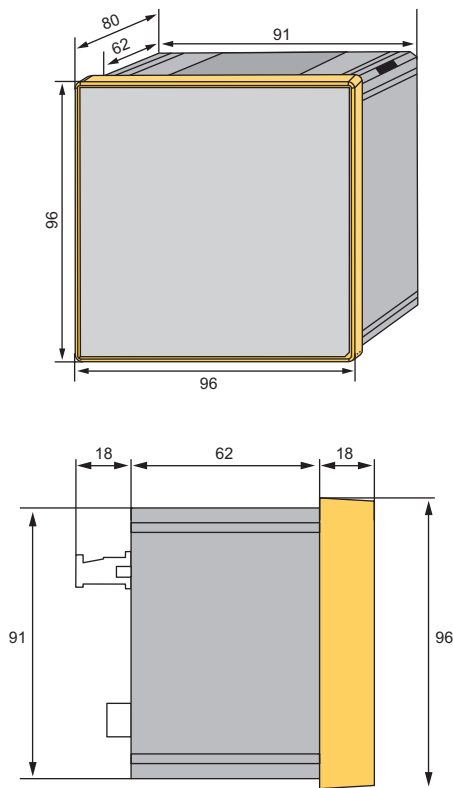


Ordering information

Type	Current input	Art. No
PEM330		
PEM330	5 A	B 9310 0330
PEM330-251	1 A	B 9310 0331
PEM333, 2DI, 2DO, RS-485 interface		
PEM333	5 A	B 9310 0333
PEM333-251	1 A	B 9310 0334

Panel cut out

Dimensions in mm

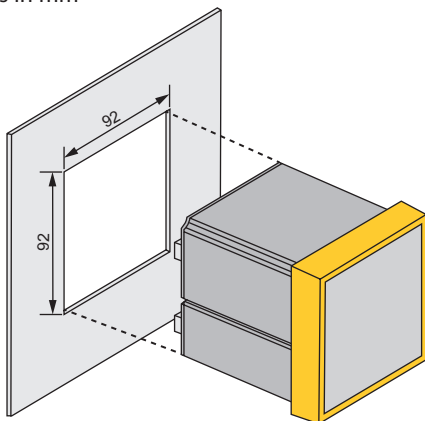

Bender GmbH & Co. KG

P.O.Box 1161 • 35301 Gruenberg • Germany
 Londorfer Straße 65 • 35305 Gruenberg • Germany
 Tel.: +49 6401 807-0 • Fax: +49 6401 807-259
 E-mail: info@bender-de.com • www.bender-de.com

BENDER Group