

Operating Manual



VMD420

Voltage and frequency monitor
for monitoring of 3(N)AC systems up to 0...500 V
for undervoltage and overvoltage and under and overfrequency
Software version: D238 V2.2x



Dipl.-Ing. W. Bender GmbH & Co. KG
Londorfer Str. 65 • 35305 Grünberg • Germany
Postfach 1161 • 35301 Grünberg • Germany

Tel.: +49 6401 807-0

Fax: +49 6401 807-259

E-Mail: info@bender-de.com

Web: <http://www.bender-de.com>

BENDER Group

© Dipl.-Ing. W. Bender GmbH & Co. KG

All rights reserved.

Reprinting only with permission
of the publisher.

Subject to change!

Table of Contents

1. How to use this documentation effectively	5
1.1 Notes for the user	5
2. Safety	7
2.1 General	7
2.2 Intended use	7
2.3 Skilled person	7
2.4 Safety information on work activities on electrical installations ..	8
3. Function	9
3.1 Device features	9
3.2 Function	9
3.2.1 Preset function	10
3.2.2 Automatic self test	11
3.2.3 Manual self test	11
3.2.4 Functional faults	11
3.2.5 Fault memory	11
3.2.6 Assigning alarm categories to alarm relays K1/K2	12
3.2.7 Time delays t , t_{on} and t_{off}	12
3.2.8 Start-up delay t	12
3.2.9 Response delay t_{on}	12
3.2.10 Delay on release t_{off}	12
3.2.11 Password protection (on, OFF)	12
3.2.12 Factory setting FAC	13
3.2.13 Erasable history memory	13
3.2.14 Alarm LEDs show which relay is in the alarm state	13
3.2.15 Starting a device using a simulated alarm S.AL	13
4. Installation, connection and commissioning	15

4.1	Fast commissioning for $U_n = 400\text{ V}, 50\text{ Hz}$	15
4.2	Installing the device	17
4.2.1	DIN rail mounting:	17
4.2.2	Screw mounting	17
4.3	Wiring of the device	18
4.4	Commissioning preset function/factory setting	19
5.	Operation and setting	21
5.1	Getting to know the user interface	21
5.2	Understanding of standard display indications	23
5.3	Getting to know keys and key functions	24
5.4	Query values	25
5.5	Starting the manual self test	26
5.6	Deactivating fault memory	26
5.7	Calling up or leaving the menu	27
5.8	Carrying out settings in the menu	27
5.8.1	Selecting menu items	27
5.8.2	Carrying out settings in the menu item AL	30
5.8.3	Carrying out settings in the menu item out	33
5.8.4	Carrying out settings in the menu item t	39
5.8.5	Carrying out settings in the menu item SET	40
5.8.6	Querying information in menu item INF	43
5.8.7	Querying and clearing fault memory in the menu item HIS	44
6.	Technical data	47
6.1	Data in tabular form	47
6.2	Standards, approvals and certifications	50
6.3	Ordering information	51
INDEX		53

1. How to use this documentation effectively

1.1 Notes for the user

This manual is intended for experts in electrical engineering and electronics and must always be kept close at hand near the equipment.

In order to make it easier for you to find specific text passages or references in this manual and for reasons of comprehensibility, important information is emphasised by symbols. The meaning of these symbols is explained below:



Information calling attention to hazards are marked with this warning symbol



Information intended to assist the user to make optimum use of the product are marked with the Info symbol

2. Safety

2.1 General

In addition to this manual, the documentation of the device includes a document entitled "Important safety instructions for BENDER products".

2.2 Intended use

The voltage monitor VMD420 monitors 3(N)AC systems in the frequency range 15...460 Hz for undervoltage, overvoltage, underfrequency and overfrequency. The devices are designed for the nominal voltage range $U_n = 0...500$ V. Separate supply voltage U_s is required.

2.3 Skilled person

Only electrically skilled persons are authorised to install and commission this device. Electrically skilled persons are those who have the relevant education, knowledge and experience, as well as knowledge of the relevant safety standards and who are able to perceive risks and to avoid hazards which electricity can create when work activities are carried out on electrical installations. The electrically skilled person is specially trained for carrying out work activities in his specific working environment and has a thorough knowledge of the relevant standards and regulations.

In Germany, an electrically skilled person must meet the requirements of the accident prevention regulation BGV A3. In other countries the applicable regulations have to be observed and followed.

2.4 Safety information on work activities on electrical installations



Touching live parts will cause danger of electric shock with fatal consequences! All work activities on electrical installations as well as installation activities, commissioning activities and work activities with the device in operation may only be carried out by electrically skilled persons!



*Danger of electric shock!
Unprofessional work activities on electrical installations may result in a threat of danger to life and limb!*

3. Function

3.1 Device features

- VMD420 requires separate supply voltage U_s
- Undervoltage, overvoltage, underfrequency and overfrequency monitoring of 3(N)AC systems up to AC 0...500 V / 0...288 V
- Asymmetry, phase failure and phase sequence monitoring
- Start-up delay, response delay and delay on release adjustable
- Adjustable switching hysteresis for U and f
- r.m.s. value measurement AC +DC
- Measured value display via multi-functional LC display
- LEDs for Power on, Alarm 1 and Alarm 2
- Fault memory for operating value
- Cyclical self test
- Test / reset button, internal
- Two separate alarm relays with one changeover contact each (K1/K2)
- N/C or N/O operation and fault memory behaviour selectable
- Password protection for device setting
- Sealable transparent cover
- Screw-type or push-wire terminals alternatively

3.2 Function

Once the supply voltage is applied, the start-up delay t is activated. Measured values changing during this time do not influence the switching state of the alarm relays.

The devices provide two separately adjustable response values (overvoltage/undervoltage). When the measuring quantity exceeds the response value (Alarm 1) or falls below the response value (Alarm 2), the time of the response delays $t_{on} 1/2$ begins. When the response delay has elapsed, the alarm relays switch and the alarm LEDs light. If the

measured value falls below or exceeds the adjusted delay on release (response value plus hysteresis) after the alarm relays have switched, the delay on release t_{off} starts. When the delay time t_{off} has elapsed, the alarm relays switch back to their initial position. With the fault memory activated, the alarm relays do not change their actual state until the reset button R is pressed.

3.2.1 Preset function

After connecting the system to be monitored for the first time, the response values for overvoltage and undervoltage (Alarm 1/2) are automatically set once to:

Response value overvoltage ($> U$): $1.1 U_n$

Response value undervoltage ($< U$): $0.85 U_n$

Response value overfrequency ($> f$) at 16.7 Hz, 50 Hz, 60 Hz: $f_n + 1 \text{ Hz}$

Response value overfrequency ($> f$) at 400 Hz: $f_n + 1 \text{ Hz}$

Response value underfrequency ($< f$) at 16.7 Hz, 50 Hz, 60 Hz: $f_n - 1 \text{ Hz}$

Response value underfrequency ($< f$) at 400 Hz: $f_n - 1 \text{ Hz}$

Preset VMD420				
Measuring principle	U_N	Preset operating range	Response value $< U$	Response value $> U$
Three-phase measurement: 3Ph	400 V (L1, L2, L3)	340...440 V	340 V	440 V
	208 V (L1, L2, L3)	177...229 V	177 V	229 V
Only when the preset function (Menu/SEt/PrE) has been started manually, the following response values can be set:				
Phase-to-neutral voltage measurement: 3n	230 V (L1, L2, L3, N)	196...253 V	196 V	253 V
	120 V (L1, L2, L3, N)	102...132 V	102 V	132 V

If the measured voltage is not within the preset operating range listed in the table, the message "AL not Set" appears on the display. Therefore it is necessary to set the response values for Alarm 1 (AL1) and Alarm 2 (AL2) manually. A detailed description of the process is given in the chapter "parameter setting".

After restoring the factory settings, the preset function is automatically active again.

During operation, the preset function can be started manually via the menu SET.

3.2.2 Automatic self test

The device automatically carries out a self test after connection to the system to be monitored and later every hour. During the self test internal functional faults are detected and will appear in form of an error code on the display. The alarm relays are not checked during this test.

3.2.3 Manual self test

After pressing the test button for > 1.5 s, the device carries out a self test. During this test, internal functional faults are detected and will be displayed in form of an error code. The alarm relays are not checked during this test.

While the test button T is pressed and held down, all device-related display elements appear on the display.

3.2.4 Functional faults

If an internal malfunction occurs, all three LEDs flash. An error code will appear on the display (E01...E32). In such a case please contact the Bender Service.

3.2.5 Fault memory

The fault memory can be activated, deactivated or can be set to continuous mode (con). If the fault memory is set to "con" mode, the alarm parameters remain stored even on failure of the supply voltage.

3.2.6 Assigning alarm categories to alarm relays K1/K2

Different alarm categories can be assigned to the alarm relays K1/K2 via the menu "out".

3.2.7 Time delays t , t_{on} and t_{off}

The times t , t_{on} and t_{off} , described below, delay the output of alarms via LEDs and relays.

3.2.8 Start-up delay t

After connection to the supply voltage U_s , the alarm indication is delayed by the preset time t (0...300 s).

3.2.9 Response delay t_{on}

When the response value is reached, the voltage monitor requires the response time t_{an} until the alarm is activated.

A preset response delay t_{on} (0...300 s) adds up to the device-related operating time t_{ae} and delays alarm signalling (total delay time $t_{an} = t_{ae} + t_{on}$).

If the fault does not continue to exist before the time of the response delay has elapsed, an alarm will not be signalled.

3.2.10 Delay on release t_{off}

When the alarm no longer exists and the fault memory is deactivated, the alarm LEDs go out and the alarm relays switch back to their initial position. When the delay on release (0...300 s) has been preset, the alarm state is continuously maintained for the selected period.

3.2.11 Password protection (on, OFF)

When password protection is enabled (on), settings can only be carried out after entering the password (0...999). If you cannot operate your device because you cannot remember your password, please contact info@bender-service.com.


3.2.12 Factory setting FAC


After activating the factory setting, all settings previously changed are reset to delivery status. In addition, the preset function allows automatic adaptation of the response values in relation to the nominal voltage U_n .

3.2.13 Erasable history memory

The first alarm value that occurs will be saved in this memory. Subsequent alarms do not overwrite this "old" value. The memory can be cleared using the Clr key in the menu HiS. This function is not password protected.

3.2.14 Alarm LEDs show which relay is in the alarm state

When the menu item **LEd**  is activated, the alarm LED AL1 indicates that K1 is in the alarm state. When AL2 lights up, K2 is in the alarm state. An alarm relay cannot switch to the alarm state unless an alarm category has been assigned to it.

When the menu item **LEd**  is deactivated, AL1 signals overvoltage, AL2 signals undervoltage, both LEDs AL1 and AL2 light up in case of frequency alarm.


3.2.15 Starting a device using a simulated alarm S.AL

If the menu item S.AL has been activated in the out menu, K1 resp. K2 switches back to the alarm state once the supply voltage is applied. This alarm state is maintained for the set duration $t + t_{on1}$. Once this time has elapsed, K1 resp. K2 switches back to the initial position provided that no fault is detected at the measuring input.


The following diagrams show the effect of a fault during a simulated alarm.

Faults at the measuring input and the resulting condition of the alarm relay K1 (K2) are shown as a hatched area.

The fault for K1 shown in the time diagram below, by way of example, has started during the S.AL phase:

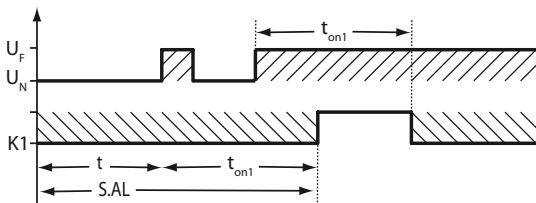

The fault for K1 shown in the time diagram below, by way of example, started when the S.AL phase has elapsed:

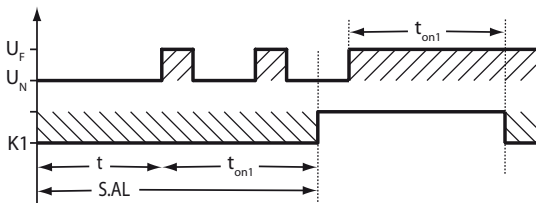

4. Installation, connection and commissioning



Danger of electric shock! Make sure that the installation area is disconnected from any electrical source before starting installation works and that the nominal voltage and supply voltage specified in the relevant data sheet are observed!

4.1 Fast commissioning for $U_n = 400 \text{ V}$, 50 Hz

If you are already familiar with voltage monitors, you can reduce the time for commissioning and connection using this brief description.

1. Check that the three-phase system being monitored is operated with a nominal voltage of $U_n = 400 \text{ V}$ and 50 Hz. This is the precondition for an automatic setting of the response values (Preset) after the first connection to the nominal voltage.
2. Make sure that the voltage monitor is in the delivery status (factory setting has not been changed).
3. When the conditions 1 and 2 are satisfied, you can connect the voltage monitor to the three-phase system to be monitored according to the wiring diagram (page 18). The following predefined response values will be set automatically:

VMD420			
U_n, f_n	Preset operating range	Response value < U, < f	Response value > U, > f
400 V (L1, L2, L3)	340 V...440 V	340 V	440 V
50 Hz	47...53 Hz	49 Hz	51 Hz

4. The currently measured phase-to-phase voltage between L1 and L2 appears on the display. Use the UP and DOWN keys to query other parameters:
 - phase-to-phase voltage L2, L3
 - phase-to-phase voltage L1, L3
 - asymmetry
 - system frequency
 - phase sequence

For detailed information about the preset function and other voltage ranges refer to page 10.

If you want to reset the voltage monitors to factory settings, refer to page 13.

4.2 Installing the device

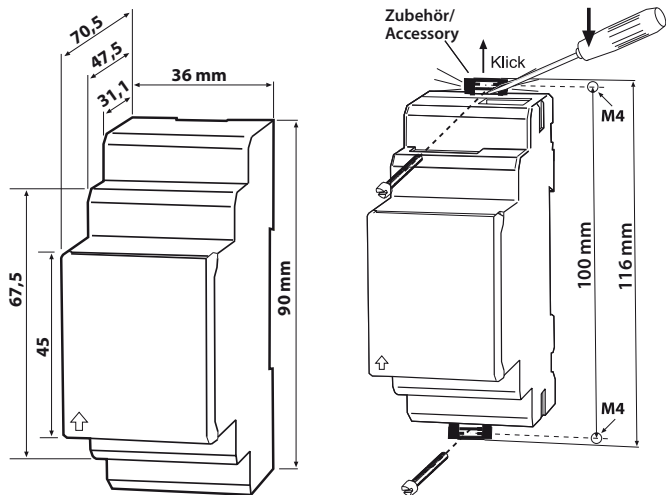


Fig. 4.1: Dimension diagram and drawing for screw fixing

4.2.1 DIN rail mounting:

1. Open the front plate cover at the lower part marked by an arrow.
2. Snap the rear mounting clip of the device into place in such a way that a safe and tight fit is ensured.

4.2.2 Screw mounting

1. Use a tool to move the rear mounting clips (a second mounting clip required, see ordering information) to a position that it projects beyond the enclosure.
2. Fix the device using two M4 screws.

4.3 Wiring of the device

Connect the device according the wiring diagram.

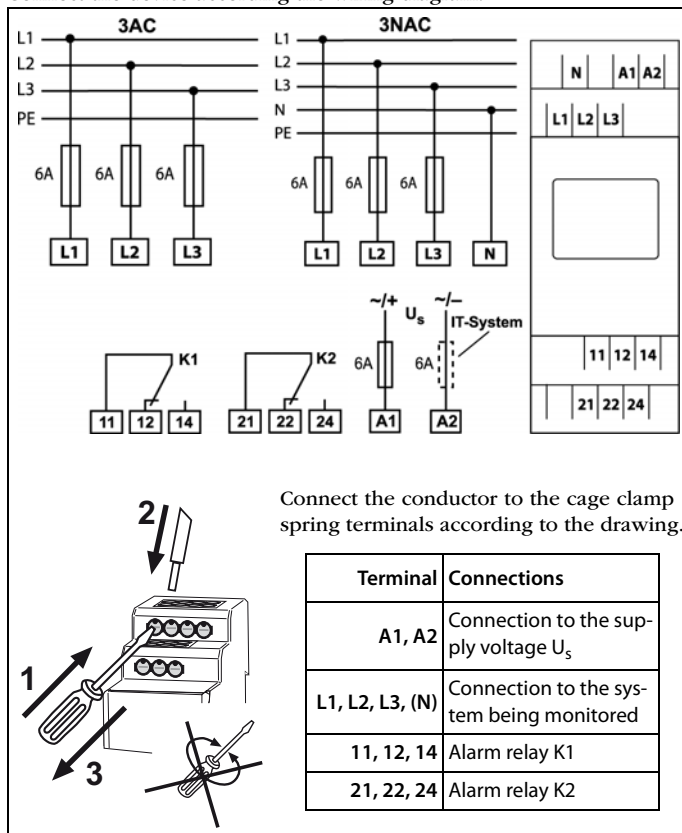


Fig. 4.2: Wiring diagram

4.4 Commissioning preset function/factory setting



*Material damage by improper connection of the device!
Prior to commissioning make sure that the device is properly connected!*



After connecting a brand-new VMD420... to a standard system of $U_n = 400\text{ V } 50\text{ Hz}$, the response values are automatically set by the internal preset function:

Overvoltage = $440\text{ V } (400\text{ V} + 10\%) (50\text{ Hz} + 1\text{ Hz})$

Undervoltage = $340\text{ V } (400\text{ V} - 15\%) (50\text{ Hz} - 1\text{ Hz})$

Other operating ranges of the preset function are given in the technical data "response values" and in the description of the function.



During the first start-up process the following response values are automatically set related to U_n :





Response value: overvoltage ($> U$): $1.1 U_n$



Response value: undervoltage ($< U$): $0.85 U_n$


<i>Hysteresis U:</i>	5 %
<i>Underfrequency < Hz</i>	OFF
<i>Overfrequency > Hz</i>	OFF
<i>Hysteresis frequency (Hys Hz):</i>	0.2 Hz
<i>Fault memory M:</i>	on
<i>Operating principle K1</i>	
<i>(> U, Asy):</i>	N/O operation (n.o.)
<i>Operating principle K2</i>	
<i>(< U, Asy):</i>	N/C operation (n.c.)
<i>AL1/AL2 indicate the alarm state of K1/K2 (LEd):</i>	OFF
<i>Alarm to K1/K2 (S.AL) when the device is started:</i>	OFF
<i>Asymmetry:</i>	30 %
<i>Phase sequence monitoring:</i>	OFF
<i>Start-up delay:</i>	$t = 0 \text{ s}$
<i>Response delay:</i>	$t_{on1} = 0 \text{ s}$ $t_{on2} = 0 \text{ s}$
<i>Delay on release:</i>	$t_{off} = 0.5 \text{ s}$
<i>Method of measurement:</i>	3Ph (phase-to-phase voltage measurement)
<i>Password:</i>	0, Off

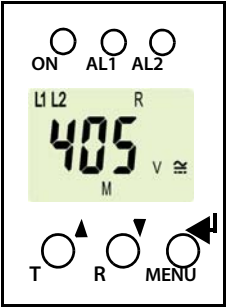5. Operation and setting

5.1 Getting to know the user interface

Device front	Element	Function
	ON	Power On LED, green
	AL1, AL2	Menu item LED  deactivated: LED Alarm 1 lights (yellow): Response value > U exceeded, LED Alarm 2 lights (yellow): Response value < U reached
	AL1 und AL2	Menu item LED  deactivated: Both LEDs light when the frequency response values > Hz or < Hz are reached
	AL1, AL2	Menu item LED  activated: LED Alarm 1 lights (yellow): K1 signals an arbitrary alarm, LED Alarm 2 lights (yellow): K2 signals an arbitrary alarm
	405 V, M	Display in standard mode: $U_n = 405 \text{ V}$; Fault memory active
	T, ▲	Test button (> 1.5 s): Indication of usable display ele- ments, starting a self test; Up key (< 1.5 s): Menu items/values

Device front	Element	Function
	R, 	Reset button (> 1.5 s): Deleting the fault memory; Down key (< 1.5 s): Menu items/values
	MENU, 	MENU key (> 1.5 s): Starting the menu mode; Enter key (< 1.5 s): Confirm menu item, submenu item and value. Enter key (> 1.5 s): Back to the next higher menu level

For further information about the menu item **LEd**  refer to page 13.

5.2 Understanding of standard display indications






Fig. 5.1: Standard displays

- | | |
|---|---|
| <p>1 DISPLAY PHASE-TO-PHASE CONDUCTORS L1-L3:
Displays active phase-to-phase conductors.</p> <p>2 DISPLAY ASYMMETRY:
Displays the asymmetry value in %.</p> <p>3 DISPLAY NEUTRAL CONDUCTOR:
Neutral conductor is active.</p> <p>4 DISPLAY PHASE SEQUENCE:
R = clockwise
L = anticlockwise</p> <p>5 DISPLAY AREA for UNITS:
Displays the value of a unit.
% = per cent (asymmetry and hysteresis)
Hz = frequency in hertz
s = second
k = kilo
V = volt</p> | <p>6 DISPLAY TYPE OF VOLTAGE:
Displays the type of voltage.</p> <p>7 PASSWORD PROTECTION ENABLED:
Indicates that password protection is activated.</p> <p>8 DISPLAY OPERATING MODE:
Displays the operating mode of K1/K2;
respectively LEDs AL1/AL2 indicate the alarm state of K1/K2</p> <p>9 FAULT MEMORY ACTIVATED:
Displays activated fault memory.</p> <p>10 DISPLAY HYSTERESIS:
Displays hysteresis in %.</p> <p>11 DISPLAY VALUE:
Displays values.</p> |
|---|---|

5.3 Getting to know keys and key functions

The following table shows the function of the keys for navigation on the display, navigation through the menu and parameter setting. From "chapter 5. 4 Query values" onwards, only the respective key symbols are used for querying values.







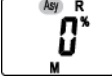
Key	Key symbol	Function
UP		<ul style="list-style-type: none"> • Call up the next display • Move to the next menu, sub menu or category • Activate parameters • Change the parameter value (increase) • Keep the key pressed for more than 1.5 seconds: Carry out the manual self test.
DOWN		<ul style="list-style-type: none"> • Call up the next display • Move to the next menu, sub menu • Deactivate parameters • Change parameters (decrease) • Keep key pressed for more than 1.5 seconds: Clear fault memory.
ENTER		<ul style="list-style-type: none"> • Call up menu, submenu. • Save changed parameter value. • Keep key pressed for more than 1.5 seconds: Call up/leave the menu/ move to the next higher submenu item.




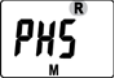
5.4 Query values

By default, the display shows the phase-to-phase voltage between L1 and L2. By pressing the UP and DOWN key, the phase-to-phase voltage between L1 and L3, L2 and L3 as well as asymmetry, system frequency and phase sequence can be queried.

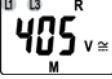

The flashing elements in the display indications below are highlighted as grey-shaded fields.

Query	Display indication
1. Query phase-to-phase voltage L1/L2	
2. Change display indication	
3. Query phase-to-phase voltage L2/L3	
4. Change display indication	
5. Query phase-to-phase voltage L1/L3	
6. Change display indication	
7. Query asymmetry	

Query	Display indication
8. Change display indication	
9. Query system frequency	
10. Change display indication	
11. Query phase sequence	

5.5 Starting the manual self test

The self test described in "chapter 3.2.2 Automatic self test" can also be started manually. During the self test, internal functional faults are detected and are indicated as error codes on the display. The alarm relays are not checked during this test.

In order to start the self test manually:

1. Keep the test button T (UP) pressed for more than 1.5 seconds.



On the display the text "tes" and all applicable display elements will appear.

5.6 Deactivating fault memory

The device utilises an erasable fault memory.

In order to clear the fault memory:

1. Keep the UP key pressed for more than 1.5 seconds.

5.7 Calling up or leaving the menu

In order to call up the menu:

1. Keep the ENTER key pressed for more than 1.5 seconds.



To leave the menu:

1. Keep the ENTER key pressed again for more than 1.5 seconds.

5.8 Carrying out settings in the menu

5.8.1 Selecting menu items

Press the ENTER key for more than 1.5 seconds to call up the menu. Menu items for different settings are available. Each menu item consists of several submenu items. The UP/DOWN keys can be used to navigate between the menu items. Keep the ENTER key pressed for no longer than 1.5 seconds to call up the menu item. Keep the ENTER key pressed for more than 1.5 seconds to return to the next higher menu level.


Menu item/Key to call up	Description/parameter setting
	<p>Querying and setting response values:</p> <ul style="list-style-type: none"> • Undervoltage: < U (AL2) • Overvoltage: > U (AL1) • Hysteresis of the voltage response values: Hys U • Asymmetry: Asy (AL1 and AL2) • Underfrequency: < Hz (AL1 and AL2) • Overfrequency: > Hz (AL1 and AL2) • Hysteresis of the frequency response values: Hys Hz • Phase sequence: PHS (AL1 and AL2)
	<ol style="list-style-type: none"> 1. Press the UP/DOWN key to select the next menu item.

Menu item/Key to call up

Description/parameter setting



Configuring the fault memory and the alarm relay:

- Activate/deactivate fault memory or select con mode
- Select N/O operation (n.o.) or N/C operation (n.c.) individually for each K1/K2
- After activating the menu item  the LEDs AL1/AL2 indicate arbitrary alarm modes of K1/K2
- Assign the alarm categories undercurrent, overcurrent, underfrequency, overfrequency or device error individually to each K1/K2 (1, r1 / 2, r2).
- Assign the alarm function individually to each K1/K2 (1, r1 / 2, r2) when starting the device



2. Press the UP/DOWN key to select the next menu item.



Set delays:

- Response delay t_{on1}/t_{on2}
- Start-up delay t
- Delay on release t_{off} (LED, relay)



3. Press the UP/DOWN key to select the next menu item.



Set the parameters for device control

- Select method of measurement 3Ph or 3n
- Enable or disable password protection, change password
- Re-establish factory settings
- Start the preset function PrE manually.
- Service menu SyS blocked



4. Press the UP/DOWN key to select the next menu item.




Query hard and software version



5. Press the UP/DOWN key to select the next menu item.

Menu item/Key to call up	Description/parameter setting
--------------------------	-------------------------------



Query stored alarm values












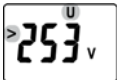










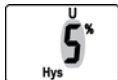


6. Press the UP/DOWN key to select the next menu item.







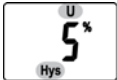

























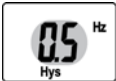


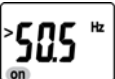










Move to the next higher menu level (return)

5.8.2 Carrying out settings in the menu item AL

1. Select menu item AL.
2. Carry out parameter change as illustrated below.
3. Keep the ENTER key pressed for more than 1.5 seconds to return to the menu item level after parameter change.


Menu item	Select submenu item	Activate/deactivate parameters	Change display parameter value	Change/save param.	
AL					
	1. Set the the response value for undervoltage				
					
					
					
2. Select submenu item					
3. Set the response value for overvoltage					
					
					
					
					
4. Select submenu item					
5. Set the hysteresis for voltage response values					
					
					

Menu item	Select submenu item	Activate/deactivate parameters	Change display parameter value	Change/save param.
6. Select submenu item				
7. Set the asymmetry response value				
8. Select submenu item				
9. Set the response value for underfrequency				
				
				
10. Select submenu item				
11. Set the response value for overfrequency				
				
				
12. Select submenu item				

Menu item	Select submenu item	Activate/deactivate parameters	Change display parameter value	Change/save param.
AL				
13. Set the hysteresis for frequency response value				
14. Select submenu item				
15. Set the response value for phase sequence				
				
				
16. Select submenu item				
17. Return to menu item AL				

5.8.3 Carrying out settings in the menu item out

1. Select menu item out.
2. Carry out parameter change as illustrated below.
3. Keep the ENTER key pressed for more than 1.5 seconds to return to the menu item level after parameter change.

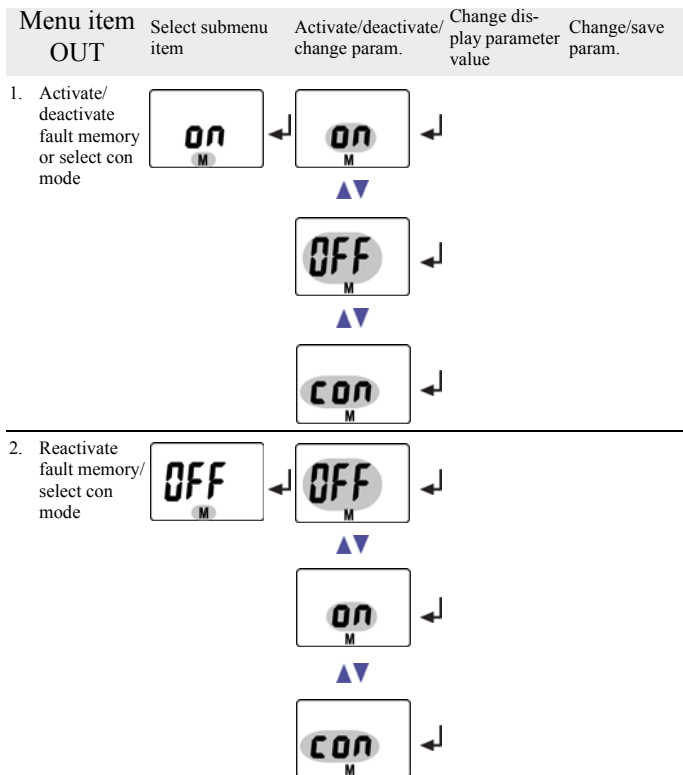

Menu item
OUT

 Select submenu
 item

 Activate/deactivate/
 change param.


 Change dis-
 play parameter
 value

 Change/save
 param.


3. Select sub-
menu item



4. Setting the
alarm relay
K1 to N/C
operation
(n.c.)

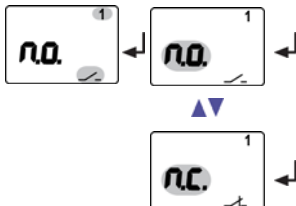


5. Reset alarm
relay K1 to N/
O operation
(n.o.)

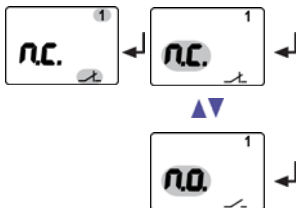














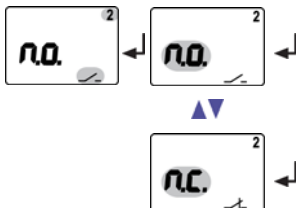





6. Select sub-
menu item

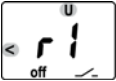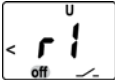

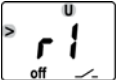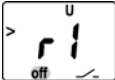

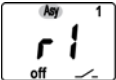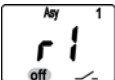

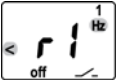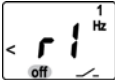

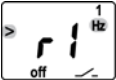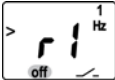














7. Set alarm
relay K2 to N/
C operation
(n.c.)



Menu item	Select submenu item	Activate/deactivate/change param.	Change display parameter value	Change/save param.
8. Reset alarm relay K2 to N/O operation (n.o.)				
9. Select submenu item				
10. LEDs AL1/AL2 indicate alarm state of K1/K2				
11. Select submenu item				
12. Assign category device error to alarm relay K1				
13. Change category				

















Menu item OUT	Select submenu item	Activate/deactivate/ change param.	Change display parameter value	Change/save param.
14. Assign under- voltage fault to alarm relay K1				
15. Change cate- gory				
16. Assign over- voltage fault to alarm relay K1				
17. Change cate- gory				
18. Assign asym- metry fault to alarm relay K1				
19. Change cate- gory				
20. Assign under- frequency fault to alarm relay K1				
21. Change cate- gory				
22. Assign over- frequency fault to alarm relay K1				

Menu item	Select submenu item	Activate/deactivate/change param.	Change display parameter value	Change/save param.
23. Change category				
24. Assign phase sequence fault to alarm relay K1			 	 
25. Change category				
26. Assign under-voltage fault to alarm relay K1			 	 
27. Change category				
28. Return to submenu item r1				
29. Select submenu item				
30. Assign category device error to alarm relay K2			Assignment is carried out in exactly the same way as for alarm relay K1	
31. Select submenu item				

Menu item	Select submenu item	Activate/deactivate/change param.	Change display parameter value	Change/save param.
32. Return to menu item out OUT				








5.8.4 Carrying out settings in the menu item t

1. Select menu item t
2. Carry out parameter change as illustrated below.
3. Keep the ENTER key pressed for more than 1.5 seconds to return to the menu item level after parameter change.

Menu item t	Select submenu item	Activate/deactivate parameters	Change dis- play parameter value	Change/save param.
1. Set response delay K2 (set t_{on1} as t_{on2})				
2. Select sub- menu item				
3. Set start-up delay for device start				
4. Select sub- menu item				
5. Set delay on release K1/ K2				
6. Select sub- menu item				
7. Return to menu item t				


5.8.5 Carrying out settings in the menu item SET

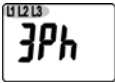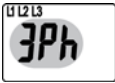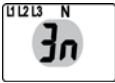1. Select menu item SET.
2. Carry out parameter change as illustrated below.
3. Keep the ENTER key pressed for more than 1.5 seconds to return to the menu item level after parameter change.

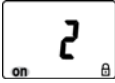
Menu item SET	Select submenu item	Activate/deactivate/change param.	Change display parameter value	Change/save param.
1. Set method of measurement for phase				
2. Select submenu item				
3. Enable password protection and enter password (3-digit numerical code)				

Menu item SET	Select submenu item	Activate/deactivate/ change param.	Change dis- play parameter value	Change/save param.
------------------	------------------------	---------------------------------------	--	-----------------------

4. Change pass-
word

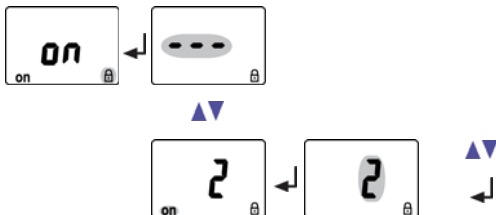

5. Disable pass-
word protec-
tion

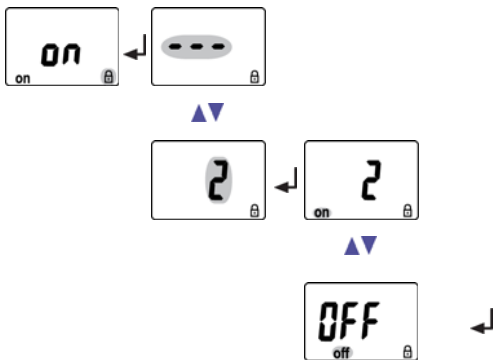

6. Select sub-
menu item



Menu item SET	Select submenu item	Activate/deactivate/ change param.	Change dis- play parameter value	Change/save param.
------------------	------------------------	---------------------------------------	--	-----------------------

7. Re-establish
factory set-
tings




The text "run" will appear on the display and the device will automatically reset to factory setting.

8. Select sub-
menu item










9. Activate pre-
set function
for 3Ph and
3n manually.



The texts "run" and "PrE" will alternately appear on the display. If the text "rdY" appears on the display, the preset function has been carried out for 3n resp. 3Ph.

10. Select sub-
menu item



Menu item	Select submenu item	Activate/deactivate/change param.	Change display parameter value	Change/save param.
11. Blocked system menu				
12. Select submenu item				
13. Return to menu item SEt				

5.8.6 Querying information in menu item INF

1. Select menu item INF.

Information such as software version and hardware version will alternately appear on the display. If all the information is displayed, you can select individual information using the UP/DOWN keys.

5.8.7 Querying and clearing fault memory in the menu item HIS

1. Select menu item HIS.
2. Change parameters according to table.
3. Keep the ENTER key pressed for more than 1.5 seconds to return to the menu item level after parameter change.

Menu item HIS

Fault indication /Submenu item


1. Query voltage faults L1/L2



2. Select fault indication




3. Query voltage faults L2/L3



4. Select fault indication




5. Query voltage faults L1/L3



6. Select fault indication



7. Query asymmetry faults



8. Select fault indication



Menu item HIS

Fault indication /Submenu
item

9. Query frequency faults



10. Select fault indication



11. Query phase faults



12. Select fault indication



13. Clear fault memory



14. Select fault indication



15. Return to menu item HiS



6. Technical data

6.1 Data in tabular form

()* = factory setting

Insulation coordination acc. to IEC 60664-1 / IEC 60664-3

Rated insulation voltage	400 V
Rated impulse voltage/pollution degree	4 kV / III
Protective separation (reinforced insulation) between . (A1, A2) - (N, L1, L2, L3) - (11, 12, 14) - (21, 22, 24)	
Voltage test acc. to IEC 61010-1:	
(N, L1, L2, L3) - (A1, A2), (11, 12, 14)	3.32 kV
(N, L1, L2, L3) - (21, 22, 24)	2.21 kV
(A1, A2) - (11, 12, 14) - (21, 22, 24)	2.21 kV

Supply voltage

VMD420-D-1:

Supply voltage U_s	AC 16...72 V / DC 9.6...94 V
Frequency range U_s	15...460 Hz

VMD420-D-2:

Supply voltage U_s	AC/DC 70...300 V
Frequency range U_s	15...460 Hz
Power consumption	≤ 3.5 VA

Measuring circuit

Measuring range (r.m.s. value) (L-N)	AC 0...288 V
Measuring range (r.m.s. value) (L-L)	AC 0...500 V
Rated frequency f_n	15...460 Hz
Frequency range	10...500 Hz**

Response values

Type of distribution system	3(N) AC / 3 AC (3 AC)*
Undervoltage < U (Alarm 2) (measuring method: 3Ph / 3n)	AC 6...500 V / 6...288 V
Overvoltage > U (Alarm 1) (measuring method: 3Ph / 3n)	AC 6...500 V / 6...288 V
Resolution of setting U	1 V

Preset function for 3 AC measurement:

Undervoltage $< U (0.85 U_n)^*$ for $U_n = 400 \text{ V} / 208 \text{ V}$ 340 V / 177 V

Overvoltage $> U (1.1 U_n)^*$ for $U_n = 400 \text{ V} / 208 \text{ V}$ 440 V / 229 V

Preset function for 3(N)AC measurement:

Undervoltage $< U (0.85 U_n)^*$ for $U_n = 230 \text{ V} / 120 \text{ V}$ 196 V / 102 V

Overvoltage $> U (1.1 U_n)^*$ for $U_n = 230 \text{ V} / 120 \text{ V}$ 253 V / 132 V

Asymmetry 5...30 % (30 %)*

Phase failure by setting of the asymmetry

Phase sequence clockwise/ anticlockwise rotation (off)*

Relative percentage error, voltage at 50 Hz / 60 Hz $\pm 1.5 \%$, ± 2 digits

Relative percentage error in the voltage range of 15 Hz..460 Hz $\pm 3 \%$, ± 2 digits

Hysteresis U 1...40 % (5 %)*

Underfrequency $< \text{Hz}$ 10...500 Hz**

Overfrequency $> \text{Hz}$ 10...500 Hz**

Resolution of setting f 10.0...99.9 Hz 0.1 Hz

Resolution of setting f 100...500 Hz 1 Hz

Preset function:

Underfrequency for $f_n = 16.7 \text{ Hz} / 50 \text{ Hz} / 60 \text{ Hz} / 400 \text{ Hz}$ 15.7 Hz / 49 Hz / 59 Hz / 399 Hz

Overfrequency for $f_n = 16.7 \text{ Hz} / 50 \text{ Hz} / 60 \text{ Hz} / 400 \text{ Hz}$ 17.7 Hz / 51 Hz / 61 Hz / 401 Hz

Hysteresis frequency Hys Hz 0.1...2 Hz (0.2 Hz)*

Relative percentage error in the frequency range of 15 Hz..460 Hz $\pm 0.2 \%$, ± 1 digits

Specified time

Start-up delay 0...300 s (0 s)*

Response delay $t_{on1/2}$ 0...300 s (0 s)*

Release delay t_{off} 0...300 s (0.5 s)*

Resolution of setting t, $t_{on1/2}$, t_{off} (0...10 s) 0.1 s

Resolution of setting t, $t_{on1/2}$, t_{off} (10...99 s) 1 s

Resolution of setting t, $t_{on1/2}$, t_{off} (100...300 s) 10 s

Operating time voltage t_{ae} $\leq 140 \text{ ms}$

Operating time frequency t_{ae} $\leq 335 \text{ ms}$

Response time t_{an} $t_{an} = t_{ae} + t_{on1/2}$

Recovery time t_b 300 ms

Displays, memory

Display LC display, multi-functional, not illuminated

Display range, measured value	AC 0...500 V
Operating error, voltage at 50 Hz / 60 Hz	±1.5 %, ±2 digits
Operating error, voltage in the range 15...460 Hz	±3 %, ±2 digits
Operating error in the frequency range of 15...460 Hz	±0.2 %, ±1 digit
History memory (HiS) for the first alarm value	data record measured values
Password	Off / 0...999 (OFF/0)*
Fault memory (M) alarm relay	on / off / con (on)*

Switching elements

Number of changeover contacts	2 x 1 (K1, K2)
Operating principle	N/C operation n.c. / N/O operation n.o.
..... K2: Err, < U, > U, Asy, < Hz, > Hz, PHS, S.AL (undervoltage < U, asymmetry Asy, N/C operation n.c.)*	
..... K1: Err, < U, > U, Asy, < Hz, > Hz, PHS, S.AL (overvoltage >U, asymmetry Asy, N/O operation n.o.)*	
Electrical service life, number of cycles	10000
Contact data acc. to IEC 60947-5-1:	
Utilisation category	AC 13..... AC 14..... DC-12..... DC-12..... DC-12
Rated operational voltage	230 V..... 230 V..... 24 V..... 110 V..... 220 V
Rated operational current	5 A..... 3 A..... 1 A..... 0.2 A..... 0.1 A
Minimum contact rating	1 mA at AC/DC ≥ 10 V

Environment / EMC

EMC	IEC 61326
Operating temperature	-25 °C...+55 °C
Classification of climatic conditions acc. to IEC 60721:	
Stationary use (IEC 60721-3-3)	3K5 (except condensation and formation of ice)
Transportation (IEC 60721-3-2)	2K3 (except condensation and formation of ice)
Storage (IEC 60721-3-1)	1K4 (except condensation and formation of ice)
Classification of mechanical conditions acc. to IEC 60721:	
Stationary use (IEC 60721-3-3)	3M4
Transport (IEC 60721-3-2)	2M2
Storage (IEC 60721-3-1)	1M3

Connection

Connection	screw-type terminals
Connection properties:	
rigid/ flexible	0.2...4 / 0.2...2.5 mm ² / AWG 24...12

Multi-conductor connection (2 conductors with the same cross section):

rigid, flexible.....	0.2...1.5 / 0.2...1.5 mm ²
Stripping length	8...9 mm
Tightening torque	0.5...0.6 Nm
Connection	push-wire terminals
Connection properties:	
Rigid	0.2...2.5 mm ² (AWG 24...14)
Flexible without ferrules	0.2...2.5 mm ² (AWG 24...14)
Flexible with ferrules.....	0.2... 1.5 mm ² (AWG 24...16)
Stripping length	10 mm
Opening force.....	50 N
Test opening, diameter.....	2.1 mm


General data

Operating mode	continuous operation
Mounting.....	any position
Degree of protection, internal components (IEC 60529).....	IP30
Degree of protection, terminals (IEC 60529)	IP20
Enclosure material	polycarbonate
Flammability class	UL94 V-0
DIN rail mounting acc. to	IEC 60715
Screw fixing	2 x M4 with mounting clip
Software version	D238 V2.2x
Weight.....	≤ 150 g

() * = factory setting

** = The technical data only applies to the operating range of the rated frequency (15...460 Hz).

6.2 Standards, approvals and certifications



6.3 Ordering information

Device type	Nominal system voltage U_n^*	Supply voltage U_S^*	Art. No.
VMD420-D-1 (push-wire terminals)	3(N)AC 0...500 V/ 288 V 15...460 Hz	AC 16...72 V / DC 9.6 V...94 V DC, 15...460 Hz	B 7301 0005
VMD420-D-1	3(N)AC 0...500 V/ 288 V 15...460 Hz	AC 16...72 V / DC 9.6 V...94 V DC, 15...460 Hz	B 9301 0005
VMD420-D-2 (push-wire terminals)	3(N)AC 0...500 V/ 288 V 15...460 Hz	AC/DC 70...300 V DC, 15...460 Hz	B 7301 0006
VMD420-D-2	3(N)AC 0...500 V/ 288 V 15...460 Hz	AC/DC 70...300 V DC, 15...460 Hz	B 9301 0006
*Absolute values of the voltage range			
Mounting clip for screw fixing (1 piece per device, accessories)			B 9806 0008

INDEX

A

- Alarm LEDs show which relay is in the alarm state 13
- Automatic self test 11

C

- Clear fault memory 26
- currently measured values
 - Asymmetry 25
 - Phase sequence 25
 - phase-to-phase voltage 25
 - rated frequency 25

D

- Delay on release toff 12
- Diagram
 - asymmetry, phase failure, phase sequence 52

F

- factory setting 13, 19
- Fast commissioning for $U_n = 400\text{ V}$ 15
- Fault memory in the operating mode on, off or con 11
- Function 9
- Functional faults 11

G

- Getting 21

I

- Indicating of the alarm state of K1/K2 13
- Indication of the alarm state of K1/K2 13
- Installation and connection 15

K

- Key functions 24
- Keys 24

M

- Manual self test 11, 26
- Manual, target group 5
- Menu item AL 30
- Menu item HIS 44
- Menu item INF 43
- Menu item LED 13
- Menu item OUT 33
- Menu item SET 40
- Menu item t 39
- Menu, call up 27
- Menu, leave 27
- Menu, settings 27
- Mounting clip for screw fixing 51

- N**
Notes for the user 5
- O**
Operating elements, function 21
Operation and setting 21
Ordering information 51
- P**
Password protection 12
Preset function 10
- Q**
Querying 25
- R**
Response delay ton 12
- S**
S.AL 13
Selecting menu items 27
Simulated alarm S.AL 13
Standard display indications 23
Starting a device using a simulated
alarm S.AL 13
Start-up delay t 12
- T**
Technical data 47
Time delays 9, 12
- U**
User interface 21
- W**
Wiring diagram 18
Work activities on electrical instal-
lations 8



Dipl.-Ing. W. Bender GmbH & Co. KG

Londorfer Str. 65 • 35305 Grünberg • Germany

Postfach 1161 • 35301 Grünberg • Germany

Tel.: +49 6401-807-0

Fax: +49 6401-807-259

E-Mail: info@bender-de.com

Web: <http://www.bender-de.com>
